Cabin Deckchair Basic & Deluxe
Replacement cover

Remove old cover

1. Place the folded Cabin deckchair on its back as shown. Turn the rocker (Weishäupl logo) over and, using a screwdriver or cordless screwdriver, release the screws attaching the cover to the rocker.
2. Pull the cover out of the groove, remove the aluminum rail from the cover and place it to one side.
* 3. Now release the cover from the deckchair canopy. To do this, unscrew the screws on the canopy struts on both sides.
* 4. Pull the two square wooden rods out of the canopy cover and place them to one side.
5. Grip the lower edge of the cover and fold it upward as far as possible.
6. Now you can reach the top frame strut. The cover is attached with two screws here. Release these screws.
7. Pull the cover out of the groove, remove the aluminum rail and place it to one side.

Install new cover

8. Hold the new cover with the shorter section at the front, as shown, and insert the aluminum rail into the stitched pocket at the top.
9. Now push the cover between the top frame struts, fold it over and insert it into the groove. Replace and tighten the two screws. If it is not possible to insert the screws, re-drill the holes in the aluminum rail using a metal drill with a diameter of 3 mm.
10. Pull the cover down to the rocker and slide the lower aluminum rail back into the stitched pocket at the end of the cover.
11. Position the rocker upright, insert the cover into the groove and screw it tight again at the back. Here, too: if it is not possible to insert the screws, please drill new holes in the aluminum rail using a metal drill with a diameter of 3 mm.
* 12. To attach the canopy cover, you will first need the shorter square wooden rod. Insert it through the loops in the cover on the left and right and screw it to the inner canopy strut on both sides.
* 13. Now slide the longer wooden rod into the stitched pocket on the top edge of the cover and screw it to the outer canopy strut.

Hinweis

*Numbers 3-4 and 12-13 only for Cabin deckchair Deluxe

Assembly instructions

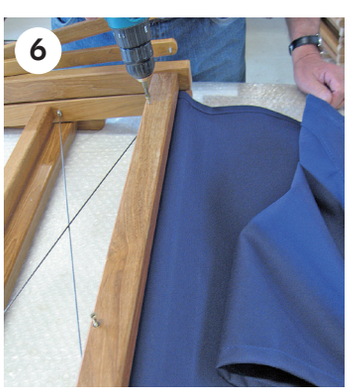

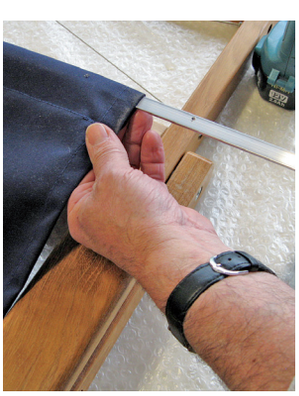

11

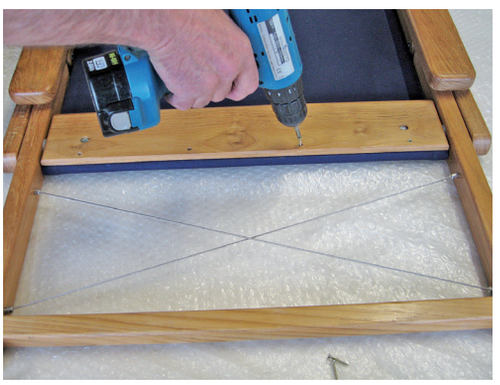

12
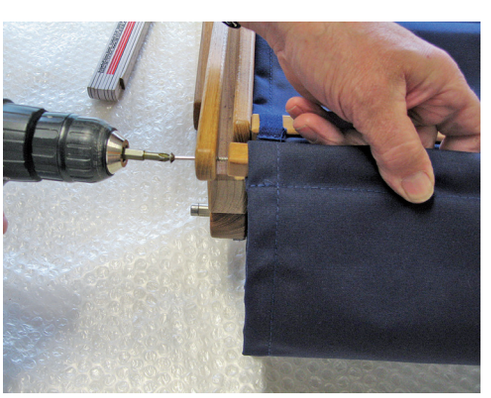
13