


## INSTALLATION INSTRUCTIONS

# FOUNDATION FOR GROUND SLEEVE

Dimensions of the foundations for  
all umbrella sizes: L 50 x W 50 x H 50 cm

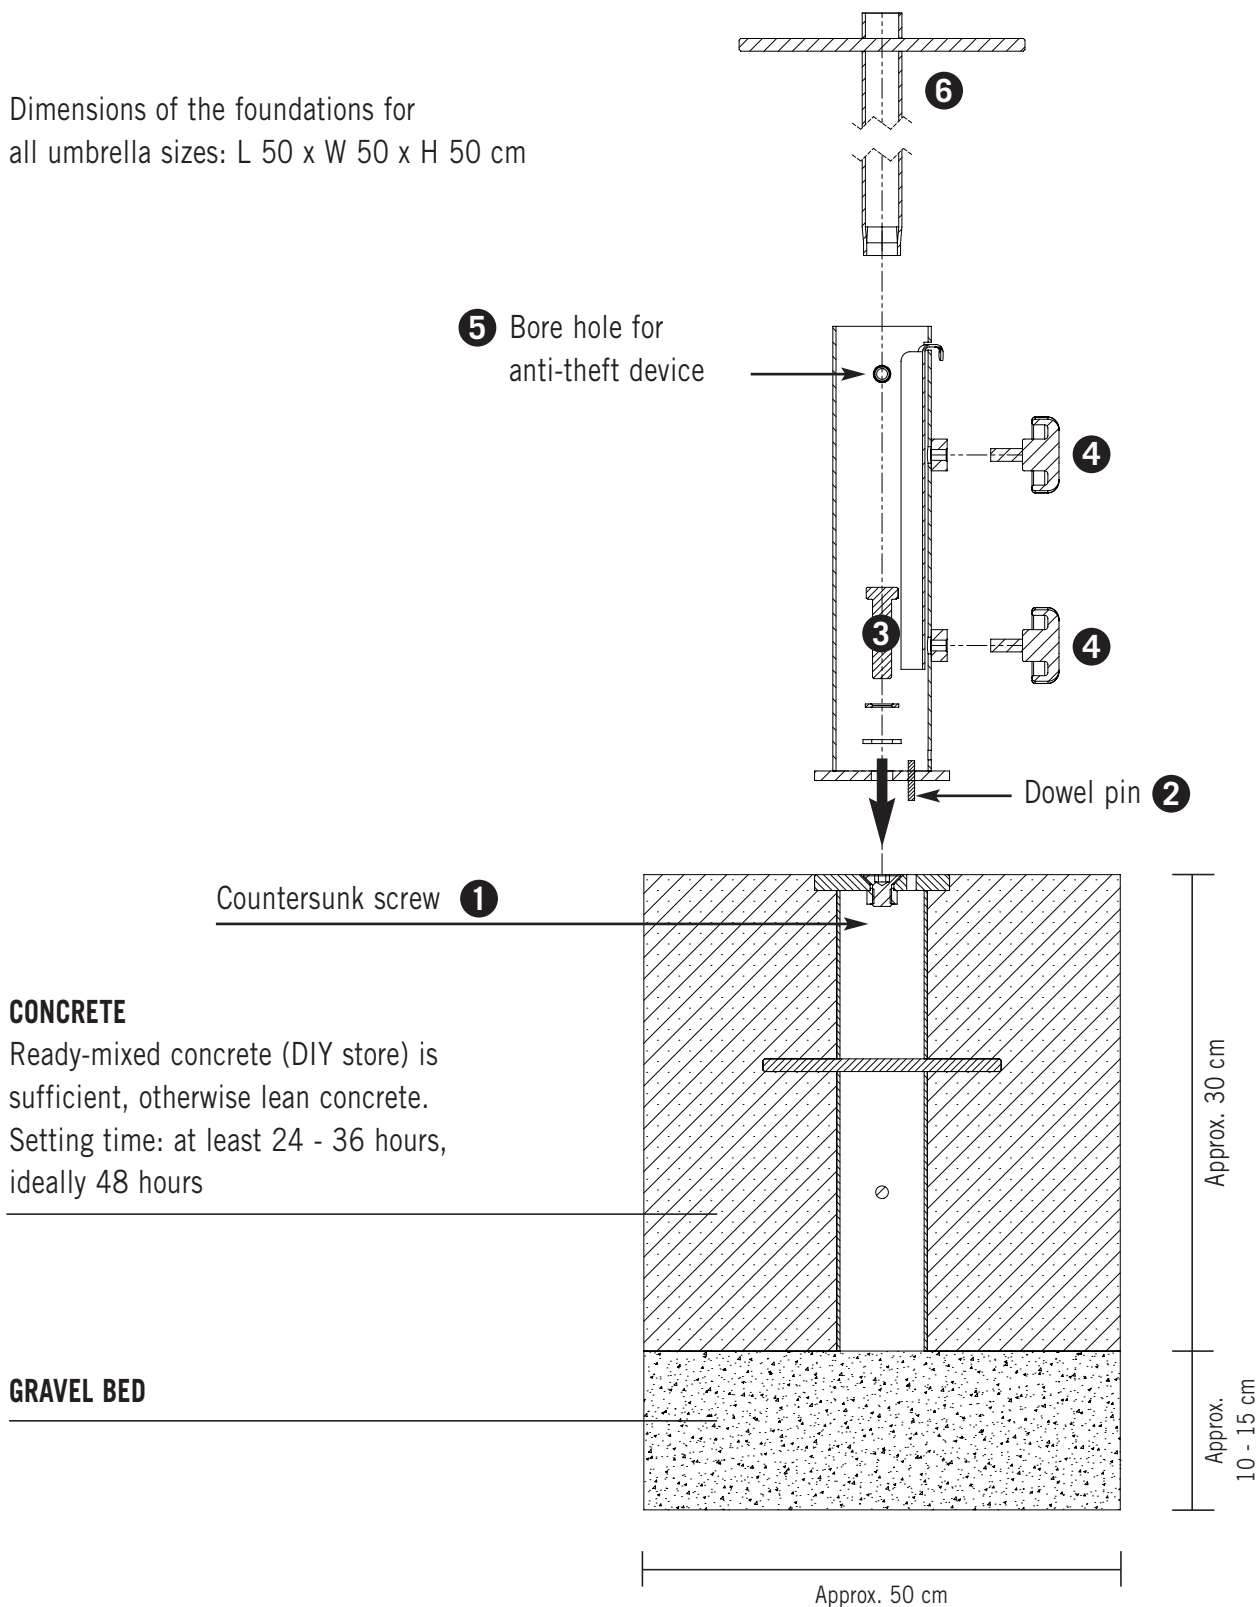

## INSTALLATION INSTRUCTIONS

# FOUNDATION FOR GROUND SLEEVE

First set the ground sleeve in concrete as shown in the drawing and described and allow it to set adequately.

Now remove the countersunk screw **1** from the ground sleeve (it is used to seal off the sleeve in winter). Place the sleeve on the concreted-in ground sleeve so that the dowel pin **2** fits into the recess. (The dowel pin prevents the sleeve turning and loosening the screw). Now fit the spring washer and then the washer onto the hex screw **3** and screw it into the ground sleeve using the assembly tool **6**.

Now insert the umbrella, align the umbrella and tighten both hand wheels **4**. You will need a 10 mm wood drill to fit the anti-theft device **5**.

Drill vertically through the existing 11 mm diameter bore hole in the sleeve, above the hand wheels. Insert the anti-theft device and attach the lock.

